



HOSEL ADAPTER SETTING CHART

#	LOFT	LIE	FACE ANGLE
1-STD	11°	57°	0°
2	10°	56°	2° Open
3	9°	57°	4° Open
4	10°	58°	2° Open
5	11°	59°	0°
6	12°	58°	2° Closed
7	13°	57°	4° Closed
8	12°	56°	2° Closed

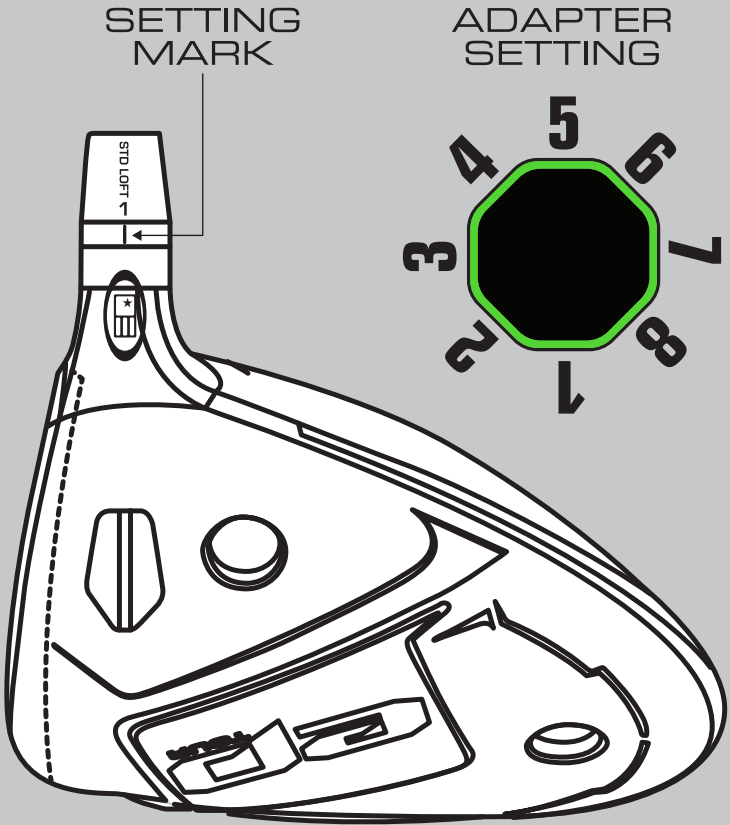

- With wrench, loosen screw at hosel until you are able to pull the shaft out of the driver head.
- Rotate the shaft so that your desired adapter setting (1-8) aligns with the mark.
- Push the shaft into the head and tighten screw with torque wrench until it clicks twice.
- You're all set and ready to hit bombs!

SHOT SHAPING TRAJECTORY CONTROL




LEGEND

10
HEAVY
WEIGHTING
(10 GRAMS)

6
MID
WEIGHTING
(6 GRAMS)

2
LIGHT
WEIGHTING
(2 GRAMS)

CENTER OF
GRAVITY

STD

DRAW

MORE DRAW

HIGH

FADE

MORE FADE

LOW